

# OPERATING AND SAFETY INSTRUCTION SHEET FOR SNO-CONE MAKER

**WARNING MOVING BLADES, FOR ADULT USE ONLY.  
PLEASE EXERCISE SOUND JUDGEMENT AND COMMON SENSE WHEN  
OPERATING THIS MACHINE. KEEP ALL BYSTANDERS OUT OF THE WORK AREA.**

Plug machine into a 20 amp 120 volt isolated outlet (an outlet where nothing else is running off the circuit).

If possible, plug unit directly into outlet.

Any extension cord must be marked/rated 10 gauge, AND BE NO LONGER THAN 25'.

Place unit on a steady, solid surface and out of the way of guest traffic.

**Make sure nothing other than ice gets down the gooseneck as it could damage the blades and motor and create a very dangerous situation with foreign particles in the snow.**

THIS IS A COMMERCIAL ICE SHAVER. ALL LOCAL HEALTH DEPARTMENT REGULATIONS SHOULD BE OBSERVED

**If you encounter any problems, please discontinue use and call  
EXPERT RENTAL immediately at (860) 496-RENT (7368) for Guidance.**

## **Operation:**

1. Start the motor and fill the gooseneck with ice cubes or block ice broken into pieces 3" or 4" in size. The larger pieces of ice, the better consistency of snow.
2. Fill tube to about an inch or so from the top.
3. Push the pusher handle down to press the ice against the cutter head. A firm, even pressure is required but sometimes you will find it better to relieve the pressure two or three times on the way down. This allows the ice to rearrange and eases its path down the tube.

Do not force the handle as the motor could stall. If ice is not feeding down the chute, relieve the handle pressure then press down again.

4. Do not apply pressure on handle until motor is up to full speed.
5. Too much pressure on the pusher handle will make ice come out too coarse; too little pressure makes the ice mushy.

**1/2 POUND OF ICE IS REQUIRED FOR EACH SNO-CONE.  
1 GALLON OF SYRUP WILL MAKE ABOUT 60 CONES.**